


Configure USB Mifare Card scanner in SimpleID


Applicable to: SL500L-USB



1. Download the driver for the USB Mifare Card scanner from Midpoint security website: http://www.midpoint-security.com/downloads/usb_mifare_scanner_driver.zip
2. Connect the USB Mifare Card scanner to your PC and when asked install the driver which you have downloaded in the previous section (you will have to extract it from the ZIP archive).
3. After the installation of the driver is complete, you have to restart SimpleID GUI if it was started. If it was not started, then you should start it now.
4. Go to the Users sub-window and select the User you would like to add a card for.
5. Click the  button to add a new card to the user.
6. The new card form will open:



7. Press the button with the label "1". The card scanner settings window will open.
8. In this window select the "Is active" checkbox and then select the COM port from the drop-down list. Only the available ports will be listed. Then select 14400 for the baud rate. Click OK when you are done.

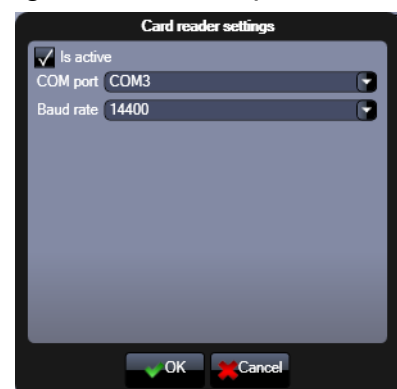

9. Now in the new card form select the scanner in the field labeled with no. "2" in the image above.
10. Place the card on the scanner and press the button labeled with no. "3" in the picture above to scan the card number.

Next time you will not need to configure this device and you will just need to do 9th and 10th steps to scan a card number.